

Digi-Dry Auto Shut-Off

Slide Auto Shut-Off control unit over leg of your dryer stand closest to the power cord of the heater and plug the Digi-Dry into receptacle cord of control box.

The Digi-Dry can be used with or without the Auto Shut-Off feature enabled.

- Setting the Dryer Control Switch to " OFF " will turn off power to the dryer.
- Dryer Control Switch set to " ON " will operate the dryer without the Auto Shut-Off enabled (full time on).
 - Set the Temperature Control to desired setting, 0 - 100%.
 - BBC recommends a starting point of 70% and adjust for desired results.

Auto Shut-Off Timer instructions:

- When setting the Timer, the Dryer Control Switch must be set to " OFF " or " ON ", not " AUTO ".
- Be sure that the first field on the Timer Setting is set to " N " and the last field is set to " M ".
 - The three numbers on the Timer Setting now denote Hrs-Min-Min.
Ex: The setting " 1-3-3 " will time as 1 hour, 33 minutes.
- After setting the desired time, switch the Dryer Control Switch to " AUTO ".
- (power to the dryer will be on at this time).
- Switching the Timer Control Switch to " RUN " will begin the Timer count-down.
- The count-down can be paused without resetting the timer by switching the Timer Control Switch to the middle " PAUSE " position. To resume Timer count-down, switch the Timer Control Switch back to " RUN ".
- " RESET " will reset the timer to the setting on the Timer Setting and reactivate the power to the Dryer. The heater will again be ON.

